 




# Getting to Know Your 2006 Cobalt

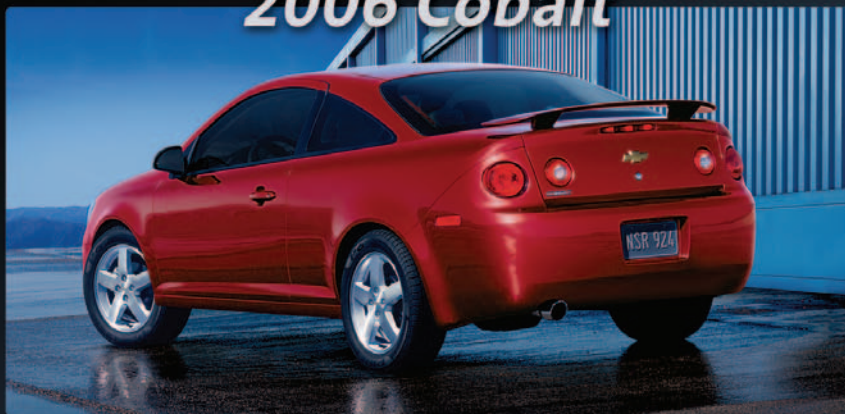

 
## Table of Contents

<b>DRIVER INFORMATION</b>	
Instrument Panel	2
Instrument Panel Cluster	3
Driver Information Center (DIC)	4
<b>COMFORT FEATURES</b>	
Seat Adjustments	5
Shoulder Belt Height Adjustment	6
Adjustable Front Headrests	6
Visor Vanity Mirrors	6
Heated Seats	6
Tilt Steering Wheel	6
<b>AUDIO SYSTEMS</b>	
Audio System Features	7
Steering Wheel Audio Controls	8
RDS Radio Functions	8
XM Satellite Radio	9
<b>CONVENIENCE FEATURES</b>	
Retained Accessory Power (RAP)	9
Remote Keyless Entry (RKE)	10
Automatic Door Locks	11
Exterior Lamps	11
Interior Lamps	12
Theft-Deterrent System	12
OnStar®	12
Cruise Control	13
Climate Control Features	13
Preventing Window Fogging	14
Cabin Air Filter	14
Accessory Power Outlets	14
Cupholders	14
Interior Storage Features	14
Emergency Trunk Release	14
Child Restraints (LATCH)	15
Split-Folding Rear Seatbacks	15
Sunroof	15
Parking Brake	15
Passenger Air Bag Status Indicator	16
<b>PERFORMANCE FEATURES</b>	
Electric Power Steering	16
Traction Control	16
Parking Your Vehicle	16
<b>MAINTENANCE FEATURES</b>	
Cleaning the Interior Upholstery	17
Battery Location	17
Tire Pressure	17
Changing a Flat Tire	18
Securing the Fuel Cap	18
Resetting the Oil Life System	18
Vehicle Symbols Glossary	19
<b>OWNER INFORMATION</b>	
Roadside Assistance	20
My GMLink	20

Congratulations on your purchase of a Chevrolet Cobalt. Please read this information about your vehicle's features and your Owner Manual to ensure an outstanding ownership experience. Note that your vehicle may not include all the features described in this booklet. Keep this booklet with your Owner Manual for easy reference.

## DRIVER INFORMATION

### Instrument Panel

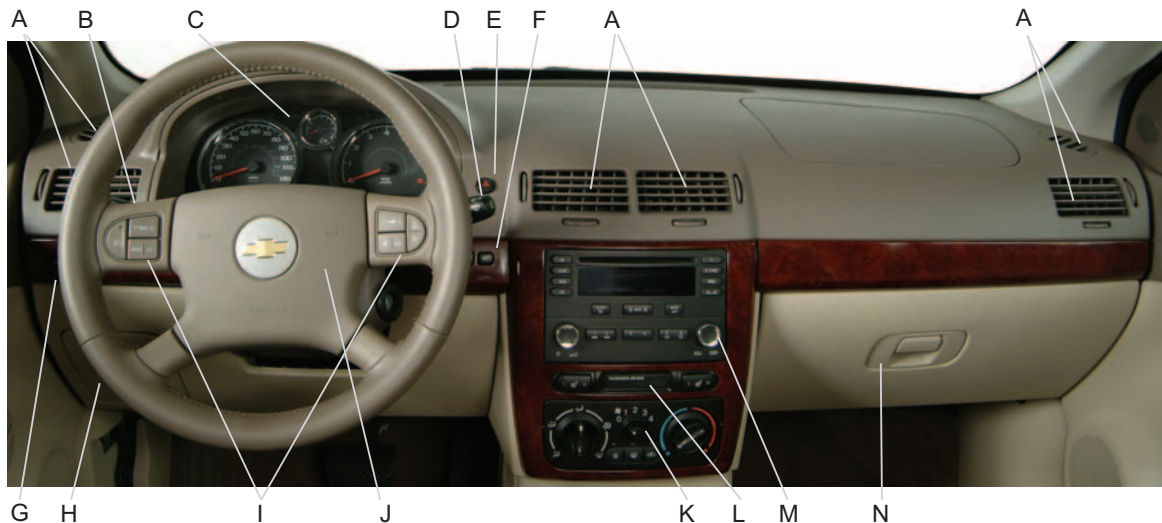

A. Air Outlets

B. Turn Signal/Headlamp Control  
Lever

C. Instrument Cluster

D. Windshield Wiper/Washer Lever

E. Hazard Warning Flasher Button

F. Driver Information Center Controls

G. Instrument Panel Brightness  
Control

H. Storage Bin with Trunk  
Release Button

I. Steering Wheel Audio  
Controls/Cruise Controls

*See Section 3 of your Owner Manual.*

J. Horn


K. Climate Controls

L. Passenger Air Bag Status  
Indicator

M. Audio System

N. Glove Box

## Instrument Panel Cluster

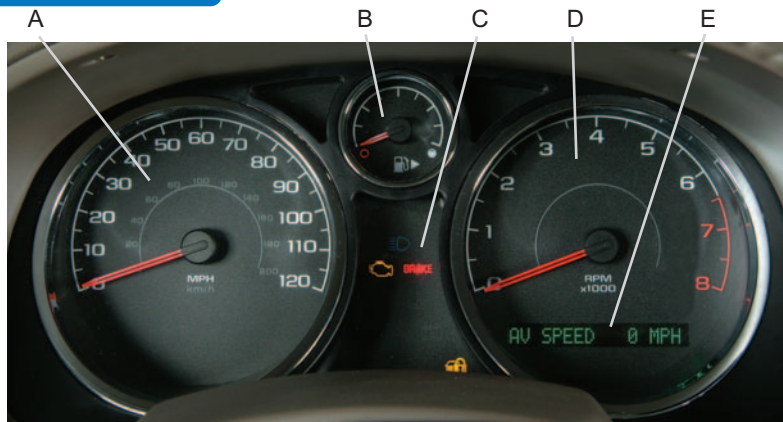 

Your vehicle's instrument panel is equipped with this cluster or one very similar to it.


The instrument panel cluster includes these key features:

- A. Speedometer
- B. Fuel Gauge
- C. Warning Lights
- D. Tachometer
- E. Odometer/Driver Information Center

**Note:** The instrument panel cluster is designed to let you know about many important aspects of your vehicle's operation. It is important to read your Owner Manual and become familiar with the information being relayed to you by the lights, gauges and indicators, as well as what action can be taken to ensure safety and to prevent damage.

*See Section 3 of your Owner Manual.*

### Driver Information Center (DIC)

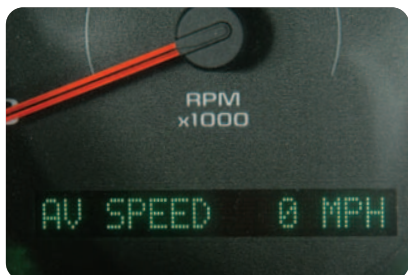 

Your vehicle's Driver Information Center (DIC) provides vehicle information, vehicle feature personalization and vehicle warning messages. To operate the DIC, the ignition switch must be in the Run position.

The DIC is controlled through two buttons located on the instrument panel to the right of the steering wheel. The DIC messages will be shown on your instrument panel cluster display.



**i (Information):** Press this button to scroll through the vehicle information mode displays.

**← (Reset/Set):** Press this button to select a mode option or to acknowledge a warning message.

Press both buttons for one second to enter the Menu mode.

### Vehicle Information

Press the **i** (Information) button to scroll through the following vehicle information:

- Trip A
- Trip B
- Fuel Range (until empty)
- Average Fuel Economy
- Average Speed
- Engine Oil Life
- Engine Coolant Temperature
- Outside Temperature/Odometer

Press and hold the **←** (Reset/Set) button to reset the information while it is displayed.

### Vehicle Feature Personalization

A variety of your vehicle's features can be personalized to your preference. To personalize features:

1. Press and hold both the **i** button and **←** button for one second to enter the Menu mode.
2. Press the **i** button to scroll through the available personalization features.
3. Press the **←** button to toggle between the available options for each feature.
4. Press the **i** button to record your selection and move to the next feature.

 

Vehicle Features that may be personalized to your preference include:

- Oil Life Reset
- Units Selection (English/Metric)
- Horn Chirp During Remote Keyless Entry Locking or Unlocking
- Exterior Light Flash During Remote Keyless Entry Locking or Unlocking
- Delayed Locking
- Automatic Vehicle Unlocking: Specific Doors
- Automatic Vehicle Unlocking: When Key Is Off or When Shift To Park (Automatic Transmission Only)

- Exterior Perimeter Lighting During Remote Keyless Entry Unlock
- Security System: Passive or Remote Keyless Entry Arming
- Select Language (English, French, Spanish or German)

### Warnings and Messages

If a problem is sensed in one of your vehicle's systems, a warning or message will appear in the DIC display (see your Owner Manual for a complete list of possible warnings and messages).

After a warning or message appears, press the  button to clear the display screen for further use. Remember, pressing the  button only makes the message disappear; it does not resolve the problem.

**Note:** Your vehicle's warnings and messages provide critical information that can prevent damage to your vehicle. Review your Owner Manual to become familiar with the information displayed and the action required.

### Check Engine or Other Warning Lights with OnStar (if equipped)

If your vehicle is equipped with OnStar and your Malfunction Indicator Lamp (Check Engine Light) illuminates, or any other warning message appears, you can press the blue OnStar button and speak to an OnStar Advisor. In many vehicles, OnStar Advisors can access certain diagnostic information and tell you how serious the condition is and what you should do about it.

*See Section 3 of your Owner Manual.*

## COMFORT FEATURES

### Seat Adjustments



#### Height Adjuster

To raise the driver's seat, lift and release the front lever (A) on the left side of the seat. Each time you raise the lever, the seat will move up. Repeat until the seat is at the desired height.

To lower the driver's seat, push down and release the lever. Repeat until the seat is at the desired height.

#### Forward or Rearward Adjuster

To move the front seats forward or rearward, lift and hold the bar under the front of each seat (B) and manually slide the seat. Release the bar to lock the seat in place. Try to move the seat to ensure it is locked in place.

#### Recliner

 
To recline the front seats, lift the recline lever (C) to release the seatback; then move the seatback to where you want it. Release the lever to lock the seatback in place. Press rearward on the seatback to ensure it is locked in place.

#### Lumbar Adjuster (if equipped)

To adjust the driver's seat lumbar support, use the knob located on the right side of the driver's seat cushion. Turn the knob until the desired lumbar support is reached.

*See Section 1 of your Owner Manual.*

### Shoulder Belt Height Adjustment (Sedan Only)

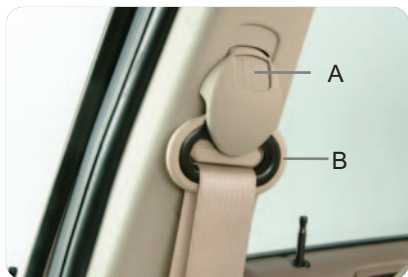

To move the shoulder belt height adjuster down, push the release button (A) down using your thumb or finger and slide the adjuster to the desired position.

To move the adjuster up, push up on the D-ring (B) from the bottom and slide the adjuster to the desired position.

See Section 1 of your Owner Manual.

### Adjustable Front Headrests

The head restraints on the front seats are adjustable. Press the button on the side of the post to adjust the head restraint. Slide the head restraint up or down.

See Section 1 of your Owner Manual.

### Visor Vanity Mirrors (if equipped)

The vanity mirrors are located on the driver's and passenger's sun visors.

See Section 2 of your Owner Manual.

### Heated Seats (if equipped)



There is one heated seat control button for each front seat located on the instrument panel center stack below the audio system.

**I (Low):** Press the switch to this position to turn the system on low.

**II (High):** Press the switch to this position to turn the system on high.

Press the button again to the center position to turn off the heated seat.

See Section 1 of your Owner Manual.

### Tilt Steering Wheel



#### Adjusting the Steering Wheel

1. Pull down the lever located on the left side of the steering column.



2. Adjust the wheel to a comfortable position. The wheel can be moved up or down.
3. Push the lever all the way up to lock the wheel in place.

See Section 3 of your Owner Manual.

## AUDIO SYSTEMS

### Audio System Features



While most of the features on your radio will look familiar, following are some that may be new.

#### Left Controls

**(Power):** Press this knob to turn the power on or off.

**(Volume):** Turn this knob to adjust the volume.

**BAND:** Press this button to switch to FM1, FM2; AM; or XM1 and XM2 (if equipped).

**SRCE (Source):** Press this button to change to the CD mode or an auxiliary mode (if installed). Press the BAND button to return to the radio mode.

#### Center Controls

**AUTO EQ (Automatic Equalization)** (if equipped): Press this button to select customized equalization settings.

**(SEEK) (Seek/Scan):** Press the right or left arrow to go to the next or previous radio station or, when a CD is playing, to the next or previous track.

To enter the scan mode, press and hold the right or left arrow for two seconds (a beep will sound). Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the right or left arrow for four seconds to scan radio station presets.

**AUTO (Automatic Volume)** (if equipped): This feature automatically adjusts audio volume based on vehicle speed to compensate for outside road noise. Press this button to set the volume compensation level at Low, Medium or High.

#### Right Controls

**DISP (Display):** Press this knob to toggle the radio display between station frequency and time. It will also display song title and artist information, if available in the broadcast.

**ADJ (Adjust):** Turn this knob to tune radio stations and to adjust selected audio functions.

#### Setting the Time

To set the clock:

1. Press and hold the (Clock) button for two seconds to enter the Set Clock mode.
2. Use the ADJ knob to select the hour.
3. Press the button.
4. Use the ADJ knob to select the minutes.
5. Press the button again to complete the process.

## Setting Preset Stations

Up to 30 preset stations (FM1, FM2; AM; or XM1 and XM2, if equipped) can be programmed on the six numbered pushbuttons. To preset a station:

1. Turn on the radio.
2. Press the BAND button to select FM1, FM2, AM, XM1 or XM2.
3. Tune to the desired station.
4. Press the equalization button to select the equalization.
5. Press and hold one of the six numbered pushbuttons until you hear a beep. The station is now preset.

## MP3 Capability (if equipped)

If your AM/FM stereo with CD has MP3 playing capability, a CD-R or CD-RW containing MP3 audio tracks will play automatically when inserted into the CD player. An MP3 symbol will be displayed.

See Section 3 of your Owner Manual.

## Steering Wheel Audio Controls (if equipped)



A number of audio controls can be adjusted at the steering wheel.

**▽SEEK△(Seek/Scan):** Press the up or down arrow to go to the next or previous

radio station or, when a CD is playing, to the next or previous track.

Press and hold the up or down arrow for two seconds (a beep will sound) to enter the scan mode. Radio stations will be scanned while in the radio mode and CD tracks while in the CD mode. Press and hold the up or down arrow for four seconds to scan radio station presets.

**BAND:** Press this button to switch to FM1, FM2; AM; XM1 or XM2 (if equipped).

**1–6 (Preset Pushbuttons):** Press this button to play stations that are programmed on the radio preset pushbuttons. When a CD is playing in the multiple-disc CD player (if equipped), press this button to go to the next available CD.

**▲ (Volume):** Press the up or down arrow to increase or decrease the volume.

**🔊 (Mute):** Press this button to silence the system. Press any audio system button to turn the sound on again.

**SRCE (Source):** Press this button to change to the CD mode or an auxiliary mode (if installed). Press the BAND button to return to the radio mode.

See Section 3 of your Owner Manual.

## RDS Radio Functions (if equipped)

Your audio system is equipped with a Radio Data System (RDS). RDS features are available for use only on FM stations that broadcast RDS information. RDS relies on receiving specific information from these stations and will work only when the information is available.



With RDS, the radio can:

- Seek stations broadcasting the type of programming you select
- Receive announcements concerning local and national emergencies
- Display messages from radio stations
- Seek stations with traffic announcements

When you tune to an RDS station, the station name and call letters will appear on the display instead of the frequency. RDS stations may also provide the time of day, a program type (P-TYPE) for current programming and the name of the program being broadcast.

### RDS Messages

When using RDS, the following messages may appear on your vehicle's audio system display.

**ALERT!:** Alert warns of local or national emergencies. You will hear the announcement, even if the volume is muted or a CD is playing. You will not be able to turn off Alert announcements.

**MSG (Message):** If the current station has a message, press this button to view the message.

*See Section 3 of your Owner Manual.*

### XM Satellite Radio (if equipped)

XM Satellite Radio offers more than 150 channels of digital-quality sound that goes wherever you go — coast to coast. XM displays song title, artist and entertainment genre.

On equipped radios, two additional listening bands are available: XM1 and XM2. To access these bands, press the BAND button until XM1 or XM2 appears on the display.

Activation fee and service subscription are extra. Available only in the 48 U.S. contiguous states and Canada (if available). For more information, contact XM online at [www.XMradio.com](http://www.XMradio.com) or call 1-800-852-XMXX (9696).

 
*See Section 3 of your Owner Manual.*

### CONVENIENCE FEATURES

#### Retained Accessory Power (RAP)

Retained Accessory Power (RAP) allows certain features, such as the radio and power windows, on your vehicle to continue working for up to 10 minutes after the key is turned to Off or removed from the ignition, and until the driver's door (or any door, depending on equipment) is opened.

*See Section 2 of your Owner Manual.*

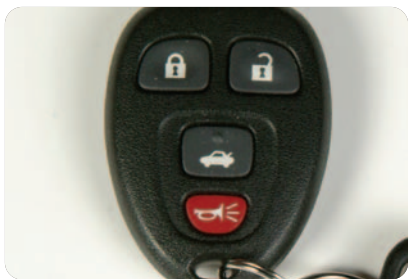**Remote Keyless Entry (RKE)  
(if equipped)**

**🔒 (Lock):** Press this button when all doors are closed to immediately lock all the doors. The interior lamps will also turn off. If enabled through the Driver Information Center (DIC), the parking lamps will flash once and/or the horn will chirp to indicate locking has occurred.

If the Lock button is pressed while any door is open and the Delayed Lock feature is enabled, the doors will not lock. Instead, a chime will sound. Once all doors are closed, the doors will lock. To cancel this delay, press the Lock button a second time within five seconds or press the power door lock switch.

**🔓 (Unlock):** Press this button to unlock the driver's door. If the button is pressed again within five seconds, all remaining doors will unlock. (This is the default DIC setting for Vehicle Unlocking.) The interior lamps will illuminate and remain on for 20 seconds or until the ignition is turned on. If enabled through the DIC, the parking lamps will flash twice and the horn will chirp twice to indicate unlocking has occurred.

**Note:** To arm or disarm the content theft-deterrent alarm system, use the RKE transmitter. The alarm system will not be armed or disarmed if the doors are locked or unlocked with a key, the manual door lock or the power door lock switch.

**🚗 (Trunk Release):** The trunk will unlatch when this button on the transmitter is pressed and held for approximately one second. You can open the trunk with the transmitter when the vehicle is stationary.

The trunk may also be opened using the Trunk Release button located in the storage bin on the left side of the instrument panel.



**📡 (Vehicle Locator/Panic Alarm):** A new Vehicle Locator feature has been added to your car's Remote Keyless Entry. The vehicle must be turned off to use this feature.

Press and hold the 📡 button for approximately one second to locate your vehicle. The horn will sound three times and the parking lamps will flash three times.

To sound the panic alarm, press and hold the button for three seconds. The horn will sound and the parking lamps will flash for 30 seconds. Press the button again or turn the ignition key to any position to cancel the panic alarm.

**See Section 2 of your Owner Manual.**

## Automatic Door Locks (if equipped)

For your safety, all doors will automatically lock when the shift lever is moved out of Park with an automatic transmission, or when the vehicle speed is greater than 5 mph (8 km/h) with a manual transmission.

This feature cannot be disabled; however, you can personalize the unlock features by using the Driver Information Center.

See *Section 2 of your Owner Manual*.

## Exterior Lamps



Your Cobalt is equipped with an Automatic Lamp Control system, which turns on the headlamps and other exterior lamps at dusk or when necessary. The exterior lamps also can be operated manually.

### Automatic Lamp Control

When you start the vehicle at night or in a dark garage, the automatic lamps will come on immediately. After driving into daylight, the system will switch to the Daytime Running Lamps after a 20-second delay.

Also, when driving into dark tunnels or garages, the system delays turning on the headlamps to avoid unnecessarily switching on and off for a short time.

### Light Sensor

The Automatic Lamp Control system's light sensor is located on top of the instrument panel. To ensure proper system operation, it's important to avoid placing any objects on or near the sensor or covering up the sensor, such as with an instrument panel cover.

### Exterior Lamp Control Switch

The exterior lamp control switch, used to manually operate the exterior lamps, is located on the lever to the left of the steering column. The switch can be rotated to each of the following four positions:

(Headlamps): Turns on the headlamps, parking lamps and taillamps.

(Parking Lamps): Turns on parking lamps and taillamps only.

**AUTO (Automatic Lamp Control):** Automatically turns on Daytime Running Lamps in the daytime, and headlamps, parking lamps and taillamps at dusk.

(Off): When operating in the AUTO position, a momentary turn of the lamp control switch to the position will turn off the Automatic Lamp Control and all of the exterior lights. The Driver Information Center will display an AUTO LIGHTS OFF message.

To activate Automatic Lamp Control, turn the switch to the position again. An AUTO LIGHTS ON message will be displayed. Automatic Lamp Control is always turned on when the vehicle is started.

**Note:** To adjust the brightness of the instrument panel cluster, use the instrument panel brightness control knob located to the left of the steering wheel.

See *Section 3 of your Owner Manual*.

## Interior Lamps

**Overhead Lamps:** The overhead lamp switch, located on the dome lamp, can be set to three positions: Off, On or Door Open. In the Door Open position, the dome lamp (or reading lamps, depending on equipment) will come on when any of the doors are opened. When you enter or exit your car through the driver's door, the interior lamp(s) will stay on for a short time after the doors have been closed.



**Interior Lamp Brightness:** To adjust the brightness of the interior lamps, turn the dial on the left side of the instrument panel (A).

**Map Lights** (if equipped): The map light switches are located under the rearview mirror.

**Rear Reading Lamps** (if equipped): The rear reading lamps are located on the dome lamp. Press the lamp to turn it on and off.

**Note:** If you leave a door open and the interior lamps are on, the lamps will turn off after 20 minutes to protect the battery.

See Section 3 of your Owner Manual.

## Theft-Deterrent System

Your Cobalt is equipped with the Pass-Key® III theft-deterrent system, which prevents vehicle theft if the ignition lock cylinder is forced to rotate without the correct key. If someone attempts to start the vehicle without authorization from the Pass-Key® III system, the vehicle's fuel system or starter will be disabled.

See Section 2 of your Owner Manual.

## OnStar® (if equipped)

If your vehicle is OnStar-equipped, the OnStar system provides in-vehicle safety, security and phone services, available 24 hours a day, 7 days a week. These services are easily accessed through the three OnStar buttons in your vehicle.



The OnStar system offers hands-free phone service using a microphone, located on the headliner between the sun visors and the vehicle's audio speakers.


For more information about OnStar features, refer to the OnStar Owner's Guide located in your glove box.

See Section 2 of your Owner Manual.

## Cruise Control (if equipped)



The cruise control buttons are located on the steering wheel.

 **(On/Off):** Press this button to turn the cruise control system on and off.

**+ RES (Resume):** Press this button to resume a set speed, or to increase the set speed, if the system is engaged.

**- SET (Set):** Press this button to set a speed, or to decrease the set speed, if the system is engaged.


When the cruise control is engaged, the cruise control symbol will illuminate in the instrument cluster.


See Section 3 of your Owner Manual.


## Climate Control Features




 **(Fan):** Turn the fan knob to increase or decrease fan speed.

 **(Off):** Turn the fan knob to the Off position to turn the system off. Only the heated seats and the rear defogger will function when the fan knob is off.

 **(Air Conditioning):** Press this button to turn on the air conditioning system.


 **(Rear Window Defogger):** Press this button to activate the rear window defogger. The defogger will shut off automatically after about 20 minutes.


 **(Recirculation):** Press this button to recirculate inside air throughout the vehicle. This mode keeps outside air from entering the vehicle.


**Temperature:** Turn the temperature knob to raise or lower the temperature setting.


### Airflow Modes


Turn the airflow control knob to one of the following five modes to change the direction of the airflow:

 **(Vent):** This mode directs air to the instrument panel outlets.

 **(Bi-Level):** This mode directs air to the instrument panel outlets and floor outlets.

 **(Floor):** This mode directs most of the air to the floor outlets and some air to the side window outlets and windshield.

 **(Defog):** This mode directs air to the windshield, side window outlets and floor outlets. Recirculation will not function in this mode.

 **(Defrost):** This mode directs most of the air to the windshield and some air to the side window outlets. Recirculation will not function in this mode.

See Section 3 of your Owner Manual.

### Preventing Window Fogging

To keep the vehicle glass fog-free, turn the airflow control knob to the Defog (🌀) mode or the Defrost (🔥) mode. Recirculation will not function in these modes, allowing outside air into the vehicle to help reduce moisture.

*See Section 3 of your Owner Manual.*

### Cabin Air Filter

Your Cobalt is equipped with a cabin air filter that removes most of the common allergens and pollutants from outside air, such as dust and pollen, before they reach the vehicle cabin.

The filter is located behind the glove box. The glove box door must be removed to access the filter from inside the vehicle. See your Owner Manual for scheduled maintenance and replacement instructions.

*See Section 3 of your Owner Manual.*

### Accessory Power Outlets



Your Cobalt is equipped with two Accessory Power Outlets (APO) on the center console that provide power for a number of electronic devices.

*See Section 3 of your Owner Manual.*

### Cupholders

Your Cobalt features cupholders for front and rear seat passengers at the front and rear of the center console.

*See Section 2 of your Owner Manual.*

### Interior Storage Features

There are several handy storage areas located throughout your vehicle. These include the front passenger's seatback pocket, center console storage bin, instrument panel storage bin, door pockets and glove box.

*See Section 2 of your Owner Manual.*

### Emergency Trunk Release



The trunk lid can be opened from inside the trunk by pulling on the emergency trunk release handle located on the left side of the trunk.

*See Section 2 of your Owner Manual.*



## Child Restraints (LATCH)

Your vehicle is equipped with LATCH anchors, and may have top tethers for use with a LATCH-compatible child restraint. If your child restraint is not compatible with the LATCH system, you may still use it by installing the child restraint with the seat belt system.

Choose a child restraint that is appropriate for the child's age and size (weight and height).

*See Section 1 of your Owner Manual.*

## Split-Folding Rear Seatbacks

Your Cobalt is equipped with 60/40 split-folding rear seatbacks that increase the cargo area. Either seatback can be lowered.

To fold the seatback(s):

1. Open the trunk and pull one or both of the small handles located in the center of the trunk.
2. Push the seatback forward from the trunk area or lower the seatback from inside the vehicle.



To close either seatback:

1. Rotate the seatback up and rearward until you hear a click.
2. Push with your hand over the latch locations to ensure the latches have engaged.

*See Section 1 of your Owner Manual.*

## Sunroof (if equipped)

The control switch for the sunroof is located on the headliner between the sun visors. It will operate only while the ignition is on.

**Vent Position:** Open the sunshade manually. Press the rear part of the switch.

**Open Position:** Open the sunshade manually. Press and hold the rear part of the switch until the roof opens to the desired position.

**Closed Position:** Press the front part of the switch and hold it until the roof closes. Close the sunshade manually.

*See Section 2 of your Owner Manual.*

## Parking Brake



The parking brake lever is located between the driver's and front passenger's seats. If your vehicle is equipped with the folding armrest between the seats, it is necessary to lift the armrest to set the parking brake.

*See Section 2 of your Owner Manual.*

### Passenger Air Bag Status Indicator (if equipped)

Your vehicle may be equipped with a Passenger Sensing System located in the front passenger seat for the front air bag. There is also a passenger air bag status indicator located on the instrument panel center stack.

**Note:** It is recommended that children not be placed in the front passenger seat, even with the Passenger Sensing System. All children should be secured in a rear seat, including an infant riding in a rear-facing infant seat, a child riding in a forward-facing child seat and an older child riding in a booster seat.

*See Sections 1 and 3 of your Owner Manual.*

## PERFORMANCE FEATURES

### Electric Power Steering

The speed-sensitive electric power steering system offers variable-effort steering assistance based on vehicle speed, providing more assistance at lower speeds and less assistance at higher speeds.

If you turn the steering wheel in either direction several times until it stops, or hold the steering wheel in the stopped position for an extended time, you may notice a reduced amount of power steering assistance. The normal amount of power steering assistance should return shortly after a few normal steering movements.

*See Section 4 of your Owner Manual.*

### Traction Control (if equipped)

The Traction Control system activates every time you start your vehicle. When one or more of the drive wheels begin to spin from traction loss, the Traction Control system will illuminate a light on the instrument panel and reduce engine power until traction is regained. If your vehicle becomes stuck, and rocking the vehicle is required, the system should be turned off.

To deactivate the Traction Control system, move the gearshift lever to the 1 position.

*See Section 3 of your Owner Manual.*

### Parking Your Vehicle

Your vehicle is equipped with an electronic shift lock release system.

#### Automatic Transaxle

When parking your vehicle, the system prevents the ignition key from being removed unless the shift lever is in Park with the shift lever button fully released.

When shifting into Park, press down the brake pedal. Then move the shift lever into Park by pressing the button on the shift lever and pushing the lever all the way forward. With the vehicle in Park, turn the ignition key to Lock and remove the key.

This vehicle is equipped with an electric BTSI (Brake Transmission Shift Interlock). The shift lever cannot be moved out of Park position without first pressing the brake. To shift out of Park, press down the brake pedal before shifting. Then press the button on the shift lever and move it to the desired gear position. The shift lever will not move

from the Park position if the button is pressed before the brake. The shift lever will not shift out of Park if the ignition is in the Lock position.

### Manual Transaxle

When parking your vehicle, the system prevents the ignition key from being removed unless the shift lever is in Reverse with the clutch pedal pressed in.

To park your vehicle, press down the clutch pedal. Then move the shift lever into Reverse and apply the parking brake. With the vehicle in Reverse and the clutch pedal pressed in, turn the ignition key to Lock and remove the key.

To start your vehicle, hold down the clutch pedal and shift into Neutral. Your vehicle will not start if the clutch pedal is not all the way down.

*See Section 2 of your Owner Manual.*

## MAINTENANCE FEATURES

### Cleaning the Interior Upholstery

 
In general, cleaning the entire seat panel is recommended, starting from the seams and moving into the stain to avoid a ring effect after drying.

For the cloth fabric seats, in most instances, soda water and a clean white cloth will remove spots and spills.

For the sport cloth fabric seats, in most instances, mild soapy water and a clean white cloth will remove spills and spots. For oil and grease spots, sprinkle baking soda on the spot, and then brush and wipe with a clean white cloth. See your Owner Manual for additional cleaning information.

*See Section 5 of your Owner Manual.*

### Battery Location

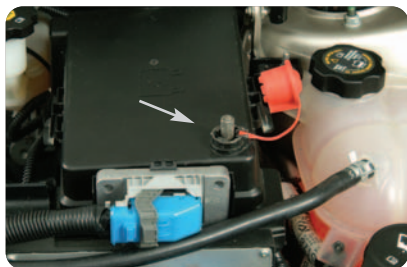

The battery is located in the spare tire well, under the load floor in the trunk. Should it be necessary to jump-start your vehicle, use the remote positive terminal in the engine compartment. The negative cable can be connected to a heavy, unpainted metal part of the vehicle.

*See Section 5 of your Owner Manual.*


### Tire Pressure

 The Tire and Loading Information label lists the proper size, speed rating and recommended tire inflation pressure for the tires on your vehicle. This label is located on the driver's doorjamb. Over-inflated and underinflated tires affect fuel economy and vehicle handling as well as promote tire wear.

*See Section 5 of your Owner Manual.*

### Changing a Flat Tire

The spare tire and jack are located in the spare tire well, under the trunk load floor.

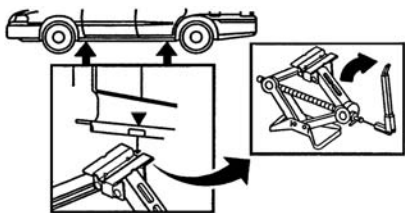

Position the jack at the proper lift points under the vehicle before attempting to jack up the vehicle. It's important to follow all of the guidelines in your Owner Manual to safely and properly change a tire.

*See Section 5 of your Owner Manual.*

### Securing the Fuel Cap

If the Check Gas Cap message is displayed on the Driver Information Center when the engine is running, check that your fuel cap is securely fastened. If the cap is not secure, turn it clockwise until a clicking sound is heard, indicating that it is properly installed.

The Check Gas Cap message will turn off after a few driving trips with the cap properly installed.

*See Section 3 of your Owner Manual.*

### Resetting the Oil Life System

The Oil Life System calculates engine oil life based on vehicle use and displays **CHANGE OIL SOON** in the Driver Information Center (DIC) when it's necessary to change your engine oil and filter. The Oil Life System should be reset to 100% only following an oil change.

#### To Reset the Oil Life System:

1. Press the **i** (Information) button until the DIC displays **OIL LIFE RESET**.
2. Press and hold the **↵** (Reset/Set) button for at least one second.
3. An **ACKNOWLEDGED** message will display when the system resets.

*See Section 5 of your Owner Manual.*

## Vehicle Symbols Glossary

Following are examples of symbols you may find on your vehicle. It is important to become familiar with them, as they alert you to various vehicle operating conditions.



Air Bag Readiness Light



Air Conditioning (A/C)



Antilock Brake System  
Warning Light



Cruise Control Set



Dome Lamps Override Button



DIC Information Button



DIC Reset/Set Button



Headlamps



Instrument Panel Brightness  
Control



Malfunction Indicator Lamp  
(Check Engine Light)



Off



Off/On



On



Parking Lamps



Rear Window Defogger



Safety Belt Reminder Light



Security Light



Traction Control Warning

**OWNER INFORMATION****Roadside Assistance****1-800-CHEV-USA**

(1-800-243-8872)

TTY Users: 1-888-889-2438

As the proud owner of a new Chevrolet vehicle, you are automatically enrolled in the Chevrolet Roadside Assistance program. This value-added service is intended to provide you with peace of mind as you drive in the city or travel the open road.

Chevrolet's Roadside Assistance toll-free number is staffed by a team of technically trained advisors who are available 24 hours a day, 365 days a year. The advisors can provide minor repair information or make arrangements to tow your vehicle to the nearest Chevrolet dealer.

We will provide the following services for 3 years/36,000 miles (60,000 km), at no expense to you:

- Fuel delivery
- Lockout service (identification required)
- Tow to nearest dealership for warranty service
- Flat tire assistance
- Jump starts

In many instances, mechanical failures are covered under Chevrolet's comprehensive warranty. However, when other services are utilized, our advisors will explain any payment obligations you might incur.

For prompt and efficient assistance when calling, please provide the following information to the advisor:

- Location of the vehicle
- Telephone number and your location
- Vehicle model, year and color
- Vehicle mileage
- Vehicle Identification Number (VIN)
- Vehicle license plate number

Chevrolet reserves the right to limit services or reimbursement to an owner or driver when, in Chevrolet's judgment, the claims become excessive in frequency or type of occurrence.

**Roadside Assistance and OnStar (if equipped)**

If your vehicle is OnStar-equipped, press the blue OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your condition, contact Roadside Assistance and relay your exact location so you will get the help you need.

**My GMLink**

The Chevrolet Owner Center at My GMLink is a complimentary service for Chevrolet owners, a one-stop resource to enhance your Chevrolet ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at [www.mygmlink.com](http://www.mygmlink.com).

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on information available at the time of printing and is subject to change without notice. Copyright 2005 by GM Corp. All rights reserved.



\* 0 6 C O B A L T G T K B \*

**GM**

06COBALGTK B